

P80 Accessories Guide



STD. Spec.

Adapter



PWR-P80-5V2A-CN

P80 adapter(CN), I/P: 100-240V,
O/P: 5V2A, use with
DC-P80-TypeC cable



PWR-P80-5V2A-EU

P80 adapter(EU), I/P: 100-240V,
O/P: 5V2A, use with
DC-P80-TypeC cable



PWR-P80-5V2A-UK

P80 adapter(UK), I/P: 100-240V,
O/P: 5V2A, use with
DC-P80-TypeC cable



PWR-P80-5V2A-US

P80 adapter(US), I/P: 100-240V,
O/P: 5V2A, use with
DC-P80-TypeC cable

USB cable



DC-P80-TypeC

1.0 meter Type-C cable

Wristband



SG-P80-HDSTP

P80 wristband

Sim tray ejector



SIM-TRAY-EJECTOR

SIM tray ejector

Optional

Pistol grip



TRG-P80-PG

P80 Pistol grip, read UHF tag and
barcode scanning like pressing the
trigger.